

Miele Outdoor Cooking Assembly Service

Miele offers high-quality assembly of our **outdoor cooking appliances** for an extra fee.


If you haven't purchased an assembly service and would like to, please call our Service Business Support team on 1300 4 MIELE (1300 464 353) before delivery.

For information about your delivery, please read the '**Miele Home Delivery Service**' guide.

Assembly Checklist

To help your assembly go smoothly, please:

- ✓ **Check your appliance(s) specifications** on the Miele website (shop.miele.com.au) under 'Outdoor Cooking'.
- ✓ **Ensure the site is suitable & safe:**
 - The Miele Fire Pro, Cook and Sear Pro appliances are certified for **outdoor use only**. They must not be installed or operated indoors, in enclosed environments or 'semi-outdoor' areas.
 - The appliances must be used outdoors in an above-ground, open-air area with natural ventilation. The area must not allow gas or products of combustion to accumulate and are rapidly dispersed by wind and natural convection.
 - Any outdoor enclosure where the appliance is used must meet one of the following requirements:
 1. An enclosure with walls on all sides, with at least one permanent opening at ground level and no overhead cover.
 2. A partial enclosure with an overhead cover and no more than two walls, with two adjacent or opposite sides fully and permanently open.
 3. A partial enclosure with an overhead cover and more than two walls, where:
 - at least 25% of the total wall area is completely open; and
 - at least 30% of the remaining wall area is open and unrestricted.
 - For balconies or verandas, at least 20% of the total side, back and front wall areas shall be open and unrestricted.
- ✓ The **surface** where your appliance will be used must be **firm, stable, level** (maximum inclination of 2°) and capable of supporting the installed product(s).
- ✓ The following minimum safety clearances must be maintained:
 - **Rear:** 200 mm from non-combustible materials or 300 mm from combustible materials.
 - **Side:** 250 mm
 - **Overhead:** 1200 mm
- ✓ Access to the point of assembly needs to be clear, unobstructed and sufficient space to unpack and assemble the modules.
- ✓ The Miele Fire Pro grill can only be assembled and operated with the matching cabinet. The top section of the grill must not be installed or used as an in-built or drop-in appliance.
- ✓ Ensure the required services are available as follows:
 - Fire Pro, Cook* & Cool M modules: 10A power point for each.

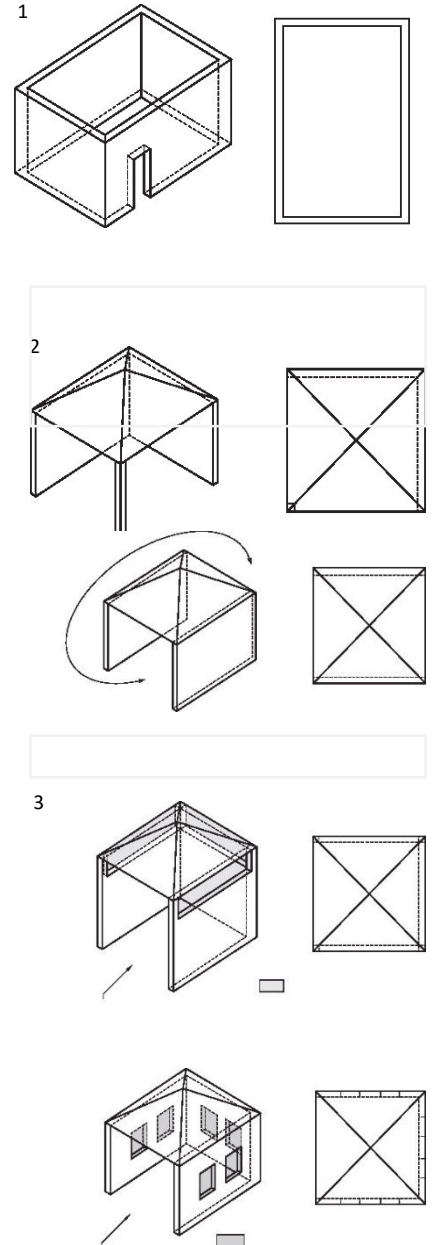

- Power boards and extension leads cannot be used.
 - Fire Pro, Cook & Sear Pro modules: gas cylinder for each (maximum size of 9 kg)**
 - Wash module: Water and drainage
 - * The Cook may be connected to the 12 V power supply of a Fire Pro grill.
 - ** The gas supply to the Fire Pro, Cook and Sear Pro may be connected to the gas cylinder of a Fire Pro cabinet or Store Gas M cabinet if the relevant EasySplit and EasyLink accessories are used (sold separately)
- ✔ If you're unable to meet the plumbing or electrical requirements, a licensed plumber or electrician must complete the necessary works before your assembly appointment.

Our delivery team cannot:

- ⊗ Provide electrical, plumbing, gas or carpentry work.
- ⊗ Remove, relocate or dispose of existing products or structures.
- ⊗ Complete structural works, site preparation or rectification.
- ⊗ Work on your existing appliances

Before assembly begins, our delivery team will check that the site meets the requirements in this guide. If the site is unsafe or unsuitable, we may be unable to complete the assembly.

Assembly Service Includes:

- ✔ Unpacking and preparing the appliance(s).
- ✔ Inspection of the appliance(s) for existing damage or defects.
- ✔ Connecting applicable appliance(s) to existing electrical outlets within reach.
- ✔ Positioning of the appliance(s).
- ✔ Levelling and securing the appliance(s).
- ✔ Removing packaging materials and cleaning any mess that was created during assembly.

If we cannot complete your assembly because the site does not meet the requirements in this guide, we will leave the appliances at your property and all paid assembly fees will be refunded.

For help or more information, visit [miele.com.au](https://www.miele.com.au) or call **1300 4 MIELE (1300 464 353)** and have your **order or customer number** ready.