

**Miele**

# Only **Smart-Biz** can do it!

Miele Professional. Immer Besser.



Only 79 minutes per cycle



A+++ energy efficiency



Plug & Play



15,000 operating hours



100% Miele quality

**SmartBiz.**

The new entry to the world  
of commercial washing and  
drying.





**New from Miele Professional:**

# The entry into the world of commercial laundry care

Whether hairdresser's, bakery or small business: Guests and clients expect cleanliness, tidiness and immaculate textiles. Economical washing machines and dryers from the new SmartBiz entry-level model range were specifically developed for commercial use and excel in terms of their short cycles, extreme durability and exemplary results. Both models are Plug & Play, ready for use, and are the products of choice in providing reliable washing and drying results up to three times a day.

**100% Miele quality for professionals like yourself**

More powerful, faster and more durable than domestic appliances: SmartBiz products are designed to cope with several cycles a day in a commercial environment and rise to the strain and duress over time in a way domestic appliances could never do.

**SmartBiz  
PWM 300 washing machine**

Clean laundry in the  
shortest of times

In the hustle and bustle of workaday life, it is crucial that textiles are immaculately clean and ready for use again in next to no time. The PWM 300 SmartBiz washing machine guarantees perfect cleanliness and offers extremely short cycles of only 79 minutes per cycle, ensuring that your laundry is ready for use again at the double. This makes it the ideal proposition for up to 3 cycles a day.



**SmartBiz  
PDR 300 HP heat-pump dryer**

Gentle drying for beautifully  
soft laundry

Commercial textiles are under great strain day in, day out – and therefore require good gentle care. The energy-efficient PDR 300 HP SmartBiz heat-pump dryer is the ideal counterpart to a SmartBiz washing machine: Thanks to the patented Miele honeycomb drum, it protects fabrics and, with PerfectDry, sports an intelligent system for spot-on drying results. As a result, your textiles are dried much faster and much more gently.



# Only **Smart-Biz** can do it!


## Fast wash programmes



**ONLY 79 MINUTES**  
for perfect results

On days when you have your work cut out for you, your laundry has to be ready for use again quickly and without any fuss. SmartBiz washing machines achieve very short cycles of only 79 minutes\*, washing faster than comparable commercial machines. Even if you have to wash several times a day, you can always count on a fresh supply of laundry.

## Rugged materials

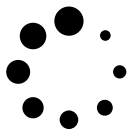

**TESTED FOR 15,000 HOURS**  
of gruelling operation

Domestic appliances are not up to the rigours of commercial laundry care. Thanks to high-quality materials and a rugged design, SmartBiz units are designed for 10,000 cycles or 15,000 hours of operation. Whether one or three washing or drying cycles a day: SmartBiz still produces top-class results even after many years.

## Choice materials



Greater forward visibility thanks  
to product longevity

Key components subject to wear and tear are made from exceptionally durable and recyclable materials: The outer drum and the drum ribs made from stainless steel, cast-iron counterweights, the drum suspension and a pulley wheel made from die-cast aluminium. As a result, both machines live up to commercial expectations – leaving you free to plan ahead.

\*SmartBiz heat-pump dryers boast short cycles lasting only 125 minutes.


Patented technologies



## **CLEAN LAUNDRY** and **GENTLE FABRIC CARE**

The patented honeycomb drum ensures that laundry is gently washed. And thanks to the innovative PerfectDry system, your laundry is dried faster, more uniformly and more gently. This way, your textiles remain spruce and in as good shape as on the first day, even after many washing and drying cycles.

A+++ energy efficiency

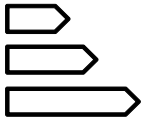

## **SAVE ON DAILY COSTS** **AND RESOURCES**

Running costs determine the economic feasibility of your business. SmartBiz machines have an A+++ energy efficiency rating and, thanks to their innovative heat-pump technology, even consume around 60% less energy than conventional condenser dryers.

Plug & Play system



## **SIMPLY PLUG IN AND SWITCH OFF**

Both SmartBiz models are supplied fitted with a supply lead and plug, ready for operation, so that machines only need to be installed, plugged in and switched on. Things couldn't be simpler or faster.



## Further sophisticated SmartBiz features

# 2 machines that rise above themselves

With SmartBiz, it's about much more than perfect cleaning performance: fitness for every day use, flexibility and the safety of users are key aspects on both machines. That is why SmartBiz models offer additional features which make your work more efficient, safer and more convenient.

### **Simple, intuitive operation**

thanks to a rotary selector with plain text and a display providing further information

### **More laundry per cycle**

thanks to large drum volume of 64 l for a 7 kg load capacity

### **Perfectly washed laundry**

with a variety of washing and drying programmes for various textiles, e.g. 'Cottons', 'Minimum iron', 'Intensive', 'Woolens', 'Cleaning textiles' and many more.

### **Considerable energy and resource savings**

thanks to efficient and fast programmes and an A+++ energy efficiency rating

### **Increased flexibility**

through matching accessories and the opportunity to use both models in a washer-dryer stack with a drawer or with a drawer and a plinth.

### **A reassuring feeling**

thanks to Miele's excellent award-winning after-sales service.

## SmartBiz for small businesses

# The right solution for every job

With SmartBiz, Miele Professional offers perfect entry-line models for professional laundry care.

Whether aprons, towels or sports shirts, the SmartBiz couplet of machines was designed with the following clients in mind:

- Bakeries, pastry shops, catering businesses
- Hairdressers and cosmetic studios
- Child-care centres and schools
- Smaller hotels, B&Bs, guesthouses
- Sports clubs, fitness centres



**Wherever you work, we can help!**

Simply contact us – and we are sure to come up with the perfect solution for your business!

## Data, facts, specifications

# Added value in detail



Washing machine	PWM 300
User interface	DirectSensor
Load capacity [kg]	7
Drum volume [l]	64
Max. spin speed [rpm]	1,400
g-factor/Residual moisture** [%]	526/49
Cycle time* [mins.]	79
Type of heating	EL
Drainage [LP DN 22]	LP
Front colour / material	LW
External dimensions H/W/D [mm]	850/596/636

Heat-pump dryer	PDR 300
User interface	DirectSensor
Drying system	Heat pump, integrated condensate drainage
Load capacity [kg]	7
Drum volume [l]	120
Cycle time Cottons/Mixed fabrics* [mins.]	125/99
Front colour / material	LW
External dimensions H/W/D [mm]	850/596/636

LW = Lotus white, enamelled, \* Cycle time in Normal Dry programme.

EL = Electric, LP = Drain pump, LW = Lotus white, enamelled, \* Duration in Cottons 60°C, cold water, \*\* Residual moisture presuming hot rinse in last rinse cycle

You wash more than three times a day, need machines with even shorter cycles, or are expanding and are in search of a comprehensive and innovative system to meet the most exacting of demands? If that is the case, we recommend **Little Giants from Miele Professional** – and would be pleased to give you our advice!



**Miele Professional**

AUS 1300 731 411

NZ 0800 002 593

[www.miele.com.au/professional](http://www.miele.com.au/professional)