

Miele

Dishwashers

Miele. Immer Besser.



Dishwashers – G 5000 Series

Miele's range of dishwashers are designed to perfectly integrate into the modern home with a variety of configurations. Whether placed under an existing countertop, free-standing with its own countertop, semi-integrated, or fully-integrated and hidden for a minimalistic look, there's a Miele dishwasher for every kitchen design.



Reasons to choose Miele 5000 Series Dishwashers:

- Optimised wash programmes with perfect cleaning results
- Innovative basket design for stress free loading
- Efficient energy and water consumption with Australia's largest range of 6 water-star rated dishwashers¹

20 YEARS

German engineered and tested to the equivalent of 20 years' average usage.
Terms and Conditions apply. Visit miele.com.au/quality

During development phase of the displayed dishwasher series G 5000, Miele tested the functionality of core components under controlled laboratory settings with 5,600 dishwashing cycles using varying wash programs which simulate 20 years' average use within an average household. Individual products are likely to require servicing from time to time and may require replacement of core components to maintain them in a serviceable condition. More: miele.com.au/quality

Quality

Miele Made Electronics

- ✓ Reliability
- ✓ Easy operation
- ✓ Serviceability



Stainless Steel Inner Cavity

- ✓ Hygienic
- ✓ Durable
- ✓ Simple to clean



Sustainability

EcoPower Technology

Economical and efficient due to innovative water feed for washing with less water.



Triple Spray Arms

For an efficient and thorough clean on all levels.



3-Stage Filtration

Highly effective filtration of wash water ensuring optimal cleaning result.



Australia's largest range of

6 water- star rated dishwashers.¹

All Miele G 5000 60cm dishwashers feature **6 star WELS rating** and either 4 or 4.5 star energy rating keeping running costs low for the life of the machine.



Miele Dishwasher Quality Pledge

In addition to the manufacturer's 2-year warranty; includes parts and labour.

- ✓ 10 year quality assurance against the failure of the door springs
- ✓ 20 year anti-flooding guarantee



Convenience and Performance

AutoOpen Drying²

Patented technology which ensures efficient and thorough drying of crockery and plastic items.



Exclusive
to Miele

3D MultiFlex Tray²


Maximum flexibility and safe storage for cutlery, large utensils and even small espresso cups.



Exclusive
to Miele

QuickPowerWash

Wash a full load in under 1 hour.

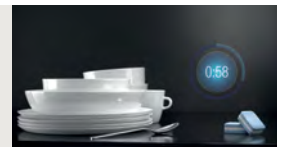

Exclusively² recommended by Riedel

Intelligent appliance features and Miele detergents ensures high quality, delicate stemware can be washed in a Miele dishwasher.



G 5000 Dishwashers






	Model Overview	G 5000 BK CLST	G 5000 SC CLST	G5210 SC CLST	G 5481 SCVi (45cm model)
Design and Construction	Display Type	7-segment Yellow display	7-segment Yellow display	7-segment Yellow display	7-segment Yellow display
	Place settings	14	14	14	10
	Basket Design	Comfort Baskets	Comfort Baskets	Comfort Baskets	Comfort Baskets
	Cutlery Basket (BK)	YES	-	-	-
	Cutlery Tray (SC)	-	Fixed cutlery tray	3D MultiFlex Tray	Fixed Cutlery Tray
Programmes	Wash Programmes	5	5	5	5
User Convenience	AutoOpen Drying	-	-	YES	-
	Operational Noise	46 (db)	46 (db)	45 (db)	46 (db)
	Wash Extras (Express / ExtraClean / ExtraDry)	YES	YES	YES	YES
Performance	Professional Circulation Pump	YES	YES	YES	YES
	Triple Spray Arms/ Alternating action	YES	YES	YES	YES
	QuickPowerWash	YES	YES	YES	YES
	Brilliant GlassCare	-	-	YES	-
Sustainability and Efficiency	EcoPower Technology	YES	YES	YES	YES
	Energy Star Rating	4	4	4.5	3.5
	WELS Star Rating	6	6	6	4.5
	WELS Registration Number	D02483	D02487	D02491	D02486
	Water Consumption in l/ wash	9.2	9.2	9.2	9.0
	Test Programme Used	ECO programme	ECO programme	ECO programme	ECO programme
Smart Appliance	Smart Appliance	-	-	-	-
Installation Types, Colour Variance including WELS Registration Number	Freestanding	G 5000 BK BRWS (D02483) G 5000 BK CLST (D02483)	G 5000 SC CLST (D02487) -	G 5210 SC CLST (D02491) -	-
	Built Under	- -	G 5000 SCU BRWS (D02488) G 5000 SCU CLST (D02488)	G5210 SCU CLST (D02492) -	- -
	Integrated	-	G 5000 SCI CLST (D02489)	G 5210 SCI CLST (D02493)	-
	Fully Interated	-	G 5053 SCVi BK² (D02490)	G 5263 SCVi BK² (D02494)	G 5481 SCVi (D02486)
Consumable Included with Appliance	1 month supply of UltraTabs All in 1³	YES	YES	YES	YES

Miele Exclusives

Highlight indicates difference from model to model within the appliance group. BK = Basket, SC = Cutlery Tray, BRWS = Brilliant White, CLST = CleanSteel.

¹Miele@home is the umbrella term covering all aspects of connected Miele appliances, regardless whether their operation is via the Miele App, via voice control, or via full integration into existing Smart Home systems. ²Includes a cutlery basket in addition to the cutlery tray. ³1 month supply equates to 20 UltraTab All in 1 tablets, based on 5 wash cycles a week.

G 5000 Dishwashers Basket Designs

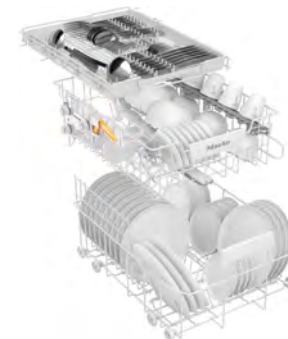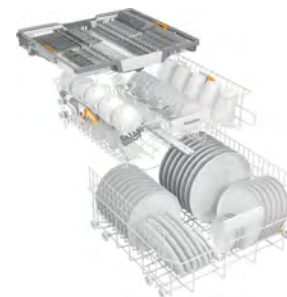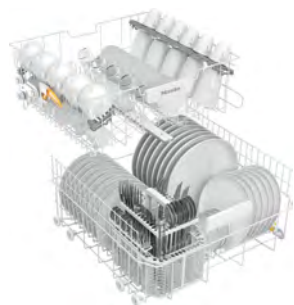

	Basket Type	Comfort Basket with Cutlery Basket	Comfort Basket with Fixed Cutlery Tray	Comfort Basket with 3D Multiflex Cutlery Tray	Comfort Basket with Fixed Cutlery Tray
	Models	G 5000 BK BRWS & CLST	G 5000 SC CLST, G 5000 SCU BRWS & CLST, G 5000 SCi CLST, G 5053 SCVi BK'	G 5210 SC CLST, G 5210 SCU CLST, G 5210 SCi CLST, G 5263 SCVi BK'	G 5481 SCVi (45cm model)
	Place Settings	14	14	14	10
	Extra Cutlery Basket	-	G 5053 SCVi BK	G 5263 SCVi BK	-
Upper Basket	Height Adjustable	YES	YES	YES	YES
	Row of spikes	Fixed	Fixed	Fixed	Fixed
	Cup Rack	2x on left and right	1x on left	1x on left	1x on right
	Wine Glass Holders	YES	YES	YES	YES
	Front Handle	Plastic	Plastic	Plastic	Plastic
Lower Basket	Fixed Spikes	Front left	Front left	Front left	Front left
	Hinged Spikes	Front right	Front right	Front right	Front right
	Front Handle	Plastic	Plastic	Plastic	Plastic
	Wine Glass Holders	-	-	-	-

What is the maximum plate size that can fit in a Miele dishwasher?

Plates as big as 35cm in diameter can fit in a Miele dishwasher.

In order to be able to fit such large plates, they need to be placed in the middle of the lower basket, tilted towards the front. For more information, refer to the dishwasher operating instructions.

What is the difference between a Fixed and a 3D Multiflex Cutlery Tray?

Fixed Cutlery Tray:


- There are no individual parts that can be moved or adjusted

3D Multiflex Tray:

- Left side adjustable left to right to accommodate tall glasses below
- Right side adjustable up & down to make space for small cups

¹Includes a cutlery basket in addition to the cutlery tray.


G 5000 Dishwashers – Basket Designs

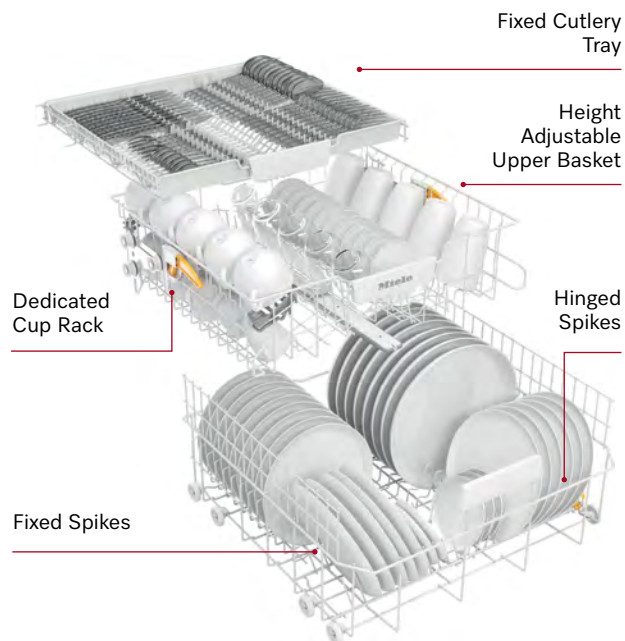

G 5000 SC Models¹

Comfort Basket with Fixed Cutlery Tray


¹Excludes G 5000 BK BRWS and G 5000 BK CLST models as they do not have a fixed cutlery tray. Both the G 5000 BK BRWS and G 5000 BK CLST have the same lower basket and the upper basket features above, however they have an additional cup rack on the right hand side, plus a cutlery basket is included. G5053 SCVi BK comes with a cutlery basket in addition to the cutlery rack

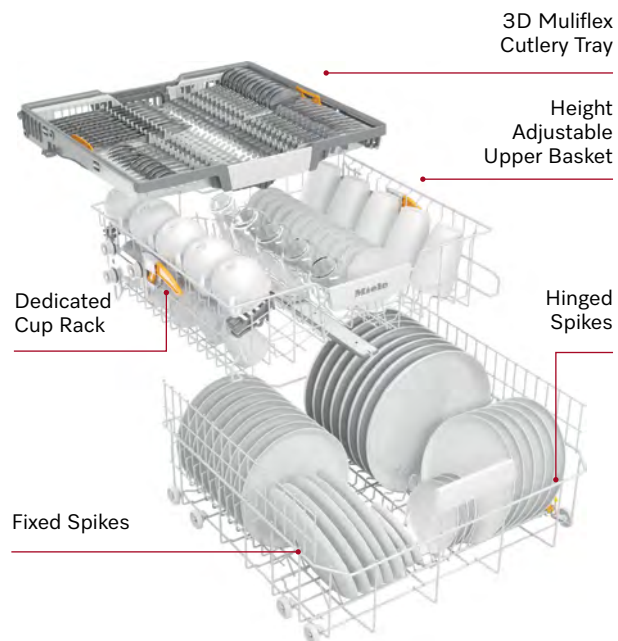

G 52XX SC Models²

Comfort Basket with 3D Multiflex Cutlery Tray

²G 5263 SCVi BK model comes with a cutlery basket in addition to the cutlery tray.

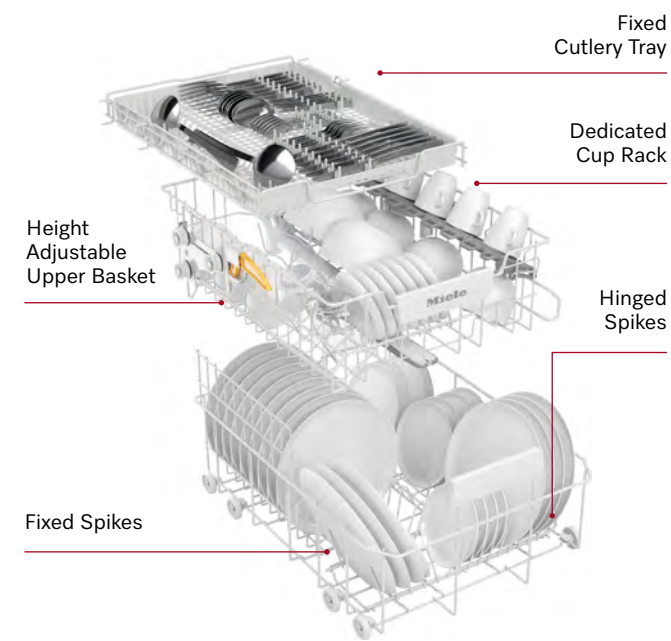

G 5481 SC (45cm) Model

Comfort Basket with Fixed Cutlery Tray



Dishwashers – G 7000 Series

Effortless with Every Load

Miele dishwashers have been meticulously designed for optimal cleaning results with efficient water and energy consumption. Additional basket features ensure flexibility and convenience, making dishwashing effortless with every load.



Reasons to choose Miele 7000 Series Dishwashers:

- Eliminate manual dosing and experience the ultimate convenience with AutoDos, automatic dosing with integrated PowerDisk
- Flexible basket designs ensuring optimal cleaning and maximum loading capacity
- Monitor and control your appliance from anywhere with Miele@home system

20 YEARS

German engineered and tested to the equivalent of 20 years' average usage.

Terms and Conditions apply. Visit miele.com.au/quality

During development phase of the displayed dishwasher series G 7000, Miele tested the functionality of core components under controlled laboratory settings with 5,600 dishwashing cycles using varying wash programs which simulate 20 years' average use within an average household. Individual products are likely to require servicing from time to time and may require replacement of core components to maintain them in a serviceable condition. More: miele.com.au/quality

Quality

Miele Made Electronics

- ✓ Reliability
- ✓ Easy operation
- ✓ Serviceability



Stainless Steel Inner Cavity


- ✓ Hygienic
- ✓ Durable
- ✓ Simple to clean



Sustainability

EcoPower Technology

Economical and efficient due to innovative water feed for washing with less water.

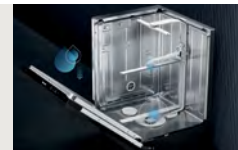

Australia's largest range of 6 water-star rated dishwashers.¹

All Miele G 7000 dishwashers feature 6 star WELS rating and 4.5 star energy rating keeping running costs low for the life of the machine.



3-Stage Filtration

Highly effective filtration of wash water ensuring optimal cleaning result.



Miele Dishwasher Quality Pledge

In addition to the manufacturer's 2-year warranty; includes parts and labour.

- ✓ 10 year quality assurance against the failure of the door springs
- ✓ 20 year anti-flooding guarantee



Convenience and Performance



Manually dosing detergent is a thing of the past. The innovative AutoDos system with integrated PowerDisk® always dispenses the optimal amount of detergent.

Each PowerDisk will give you approximately 20 cleaning cycles, which is about 1 month worth of washes (based on average usage).

- Experience superior cleaning results
- Automatically dispenses the right amount of detergent
- Easy cleaning without over or under dosing
- Enjoy freedom and intelligent operation with Miele@home system
- Preschedule dishwashing cycles with AutoStart

Riedel exclusively recommend Miele as their dishwasher of choice for washing delicate stemware due to the intelligent appliance features and Miele detergents.



Exclusive to Miele

The FlexLine adjustable basket design ensures easy stacking for effortless and optimum cleaning results.



Intelligent operation, consumption insights, important reminders and peace of mind with Miele@home² system.



G 7000 Dishwashers



	Model Overview	G 7130 SC CLST	G 7604 SCU CLST	G 7719 SCi XXL	G 7939 SCi XXL
Design and Construction	Display Type	1-line text display	1-line text display	1-line text display	M Touch
	Place Settings	14	14/15 (for XXL models)	15	15
	Basket Design	ExtraComfort	ExtraComfort	MaxiComfort	MaxiComfort
	Cutlery Tray (SC)	3D MultiFlex Tray	3D MultiFlex Tray	3D MultiFlex Tray	3D MultiFlex Tray
Programmes	Wash Programmes	8	10	13	13
User Convenience	Automatic Dispensing with Integrated PowerDisk	YES	YES	YES	YES
	AutoStart Function	YES	YES	YES	YES
	Delay Start	YES	YES	YES	YES
	EcoFeedback	YES	YES	YES	YES
	AutoOpen drying	YES	YES	YES	YES
	AutoClose	-	-	YES (Vi model only)	YES (all models)
	BrilliantLight (LED)	-	-	YES	YES
	Knock2open (K2O)	-	-	YES (Vi model only)	YES (Vi model only)
	Operational Noise	43 (dB)	42 (dB)	42 (dB)	42 (dB)
Performance	Wash Extras / Options: Quick / ExtraClean / ExtraDry / Intense Zone / Bottle Wash	YES / YES / YES / YES / YES	YES / YES / YES / YES / YES	YES / YES / YES / YES / YES	YES / YES / YES / YES / YES
	MultiLingua	YES	YES	YES	YES
	Professional Circulation Pump	YES	YES	YES	YES
	Triple Spray Arms / Alternating Action	YES	YES	YES	YES
	QuickPowerWash	YES	YES	YES	YES
Sustainability and Efficiency	Brilliant GlassCare	YES	YES	YES	YES
	EcoPower Technology	YES	YES	YES	YES
	Energy Star Rating	4.5	4.5	4.5	4.5
	WELS Star Rating	6	6	6	6
	Water Consumption in l/ wash	9.3 (9.6 for XXL models)	9.3 (9.6 for XXL models)	9.6	9.6
Smart Appliance	Test Programme Used	ECO programme	ECO programme	ECO programme	ECO programme
	Miele@home ¹	YES	YES	YES	YES
Installation Types, Colour Variance including WELS Registration Number	Freestanding	G 7130 SC CLST (D02879)	-	-	-
	Built Under	G 7130 SCU CLST (D02880)	G 7604 SCU CLST (D02883) G 7609 SCU CLST XXL (D02885)	-	-
	Integrated	G 7130 SCi CLST (D02881)	G 7609 SCi CLST XXL (D02886)	G 7719 SCi XXL OBSW (D02888)	G 7939 SCi XXL OBSW (D02890)
	Fully Interated	G 7180 SCVi CLST (D02882) G 7185 SCVi XXL (D02884)	G 7659 SCVi XXL (D02887)	G 7799 SCVi XXL K2O (D02889)	G 7989 SCVi XXL K2O (D02891)
Consumable Included with Appliance	1 month supply of PowerDisk ²	YES	YES	YES	YES
Redeemable Voucher Included	6 months supply of PowerDisk	YES	YES	YES	YES


Miele Exclusives

Highlight indicates difference from model to model within the appliance group. SC = Cutlery Tray, CLST = CleanSteel, OBSW = Obsidian Black.

Alteration rights reserved | 01.07.24


ExtraComfort with 3D Multiflex Cutlery Tray¹

G 71xx & G 76xx Models

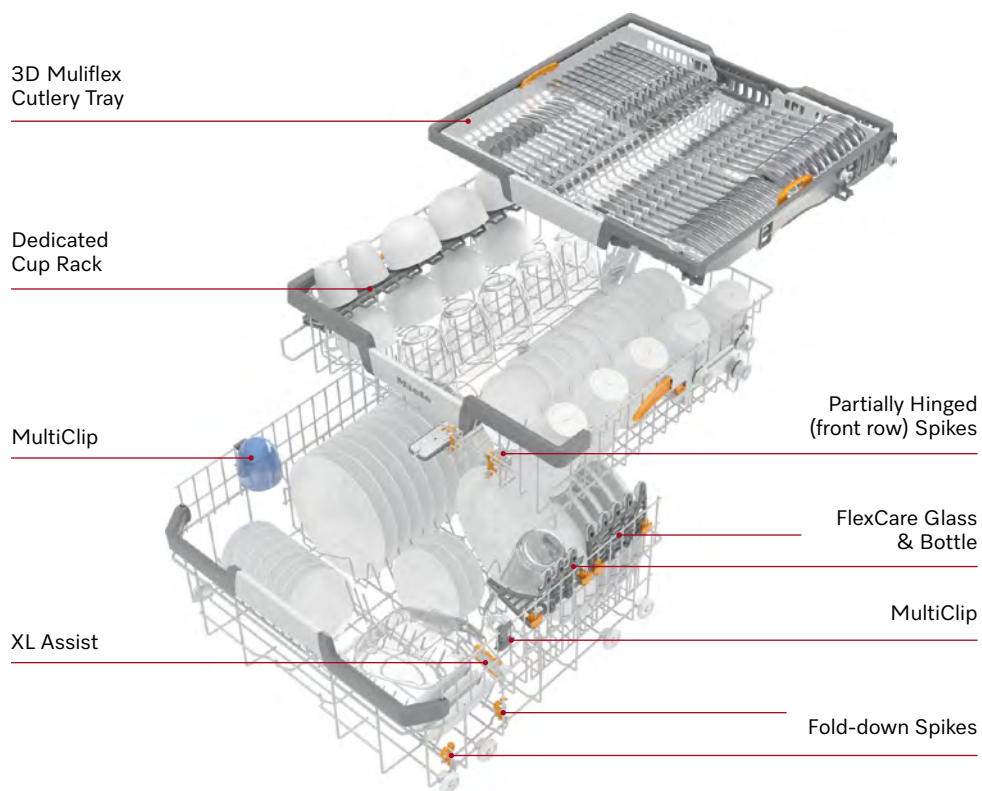

MaxiComfort with 3D Multiflex Cutlery Tray

G 77xx & G 79xx Models

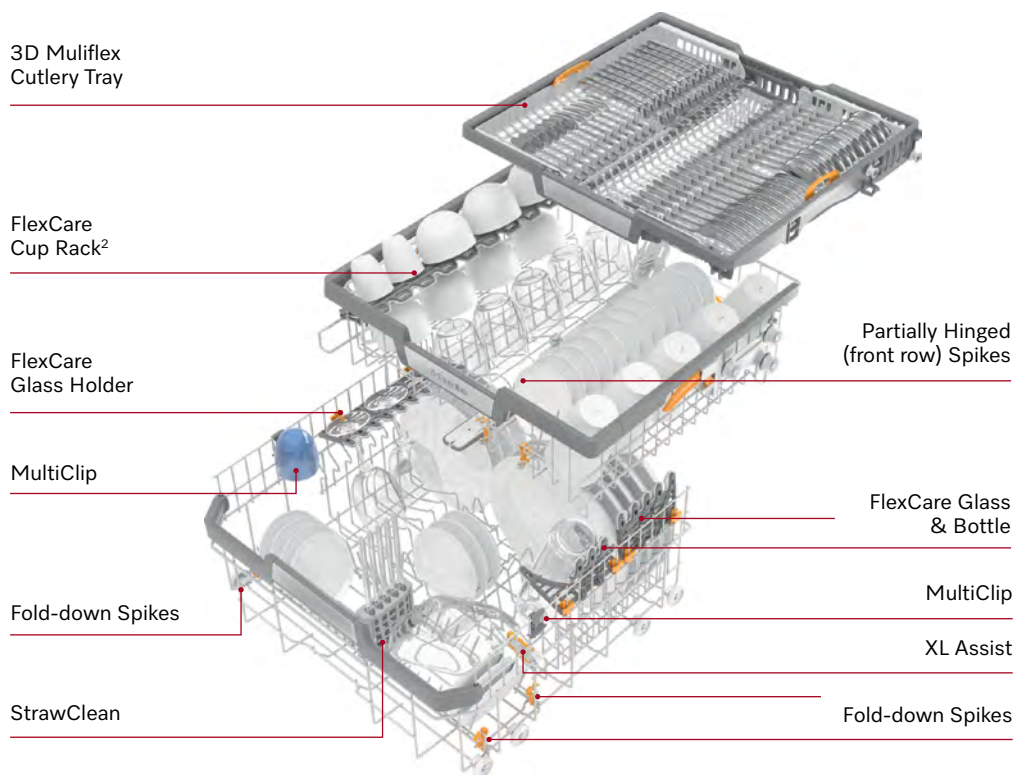

What materials is the FlexCare cup rack made from?

Miele uses Polypropylene (PP), which is highly suitable to use in dishwashers on account of its properties and food-safety aspects. Additionally, glass fibres and a stainless-steel fibre have been used to provide greater stability. A strip of silicone has been used at the front to provide a very gentle hold for wine glasses, whilst offering secure support.

What materials are the FlexCare glass holder with the new MultiClip made from?


The soft components consist of silicone to provide a particularly gentle hold for stemware. The basic rack consists of Polypropylene (PP) with a proportion of fibre glass. The glass fibres make the material stiffer, ensuring a high degree of stability without taking up too much space.

¹The following XXL models have an additional cup rack on the right hand side of the upper basket:

G 7185 SCVi XXL, G 7609 SCU CLST XXL, G 7609 SCi CLST XXL + G 7659 SCVi XXL

²Includes a silicone inlay to securely hold tall glasses with long stems (not included in the ExtraComfort baskets).

G 7000 Dishwasher Programmes by Model

Icon	Programme	G 71xx	G 76xx	G 77xx	G 79xx	Explanation
ECO	ECO	✓	✓	✓	✓	Most efficient in terms of its combined energy and water consumption for cleaning dishes with a normal level of soiling.
	Automatic 45 - 60°C	✓	✓	✓	✓	Programme adjusts automatically to load size and degree of soiling.
	ComfortWash 45°C	✓	✓	✓	✓	Balanced and gentle programme for mixed crockery including temperature-sensitive glasses and plastics.
	PowerWash 60°C	✓	✓	✓	✓	Short programme suitable for lightly dried-on food deposits.
	Intensive 75°C	✓	✓	✓	✓	Maximum cleaning performance for stubborn soiling of pots, pans, everyday porcelain and cutlery.
	ExtraQuiet 50°C	✓	✓	✓	✓	Very quiet programme.
	ComfortWash+ 55°C	✓	✓	✓	✓	For cleaning mixed loads with fresh food deposits.
	Gentle 45°C	✓	✓	✓	✓	Particularly gentle cleaning of temperature-sensitive crockery, glasses and plastics.
	SolarSave	-	✓	✓	✓	Programme without heating resulting in very low energy consumption.
	Hygiene 75°C	-	✓	✓	✓	Proven hygiene results tested by third-party testing institute for robust items eg baby bottles, chopping boards.
	Tall items 65°C	-	-	✓	✓	Remove the upper basket for more space so large temperature resistant pots & pans can be accommodated.
	Pasta/Paella	-	-	✓	✓	Long soak phase for removing soiling containing starch left by potatoes, pasta and rice.
	Glasses	-	-	✓	✓	Without rinse aid and particularly useful for washing beer glasses.
	Maintenance programme	✓	✓	✓	✓	Use with IntenseClean to clean the wash cabinet.
	Rinse out salt	✓	✓	✓	✓	Rinse program to dissolve salt residue after replenishing reservoir.

Highlight indicates updated dishwasher programmes. For further detailed information refer to the Dishwasher operating instructions.

Miele Experience Centres

ACT

Canberra

Level 1, Shop CF03
Canberra Centre
148 Bunda St
Canberra ACT 2608

NSW

Bondi

Shop 5001
Westfield Bondi Junction
500 Oxford St
Bondi Junction NSW 2022

Chatswood

298 Victoria Ave
Chatswood NSW 2067

David Jones Sydney

Lower Ground Food Hall
David Jones Elizabeth Street Store
86-108 Castlereagh St
Sydney NSW 2000

Miele Partner Centre Drummoyne

90-98 Victoria Rd
Drummoyne NSW 2047

QLD

Brisbane

63 Skyring Terrace
Newstead QLD 4006

Gold Coast

Brickworks Centre
131 Ferry Rd
Southport QLD 4215

SA

Adelaide

83-85 Sir Donald Bradman Dr
Hilton SA 5033

Miele Partner Centre Plympton

620 Cross Rd
Plympton Park SA 5038

VIC

Doncaster

Shop 1136/7
Westfield Doncaster
619 Doncaster Rd
Doncaster VIC 3108

South Melbourne

206-210 Coventry St
South Melbourne VIC 3205

Miele Partner Centre Brighton

509 Nepean Highway
Brighton VIC 3186

WA

Claremont

205-207 Stirling Highway
Claremont WA 6010

Karrinyup

Level 1, Shop SP1236
Karrinyup Shopping Centre
200 Karrinyup Rd
Karrinyup WA 6018

Telephone:

1300 4 MIELE (1300 464 353)

www.miele.com.au

www.selfservice.miele.com.au

www.shop.miele.com.au

NEW ZEALAND

Auckland

8 College Hill
Freemans Bay
Auckland 1011

Christchurch

2 Cathedral Square
Christchurch 8011

Wellington

183 Featherston St
Wellington 6011

Telephone:

0800 4 MIELE (0800 464 353)

www.miele.co.nz

www.selfservice.miele.co.nz

www.shop.miele.co.nz